

Terminal Board (48 Frame)

This motor is strictly 115V and cannot be connected at 230V. To reverse motor direction (switch position up makes lift go down and visa versa), interchange the Red and Black motor wires.


For troubleshooting, refer to page 8



AMS Reversing Switch

Use the below diagrams if your control is an Aqua Marine Supply reversing switch. Please double check the switch wiring to ensure the wires are connected in the correct place using the switch wiring diagram on page 6. Our diagrams show a 5-wire cable consisting of Black, White, Red, Orange, and Green which is what is used by AMS and is the standard throughout most of the industry.

115V Connections

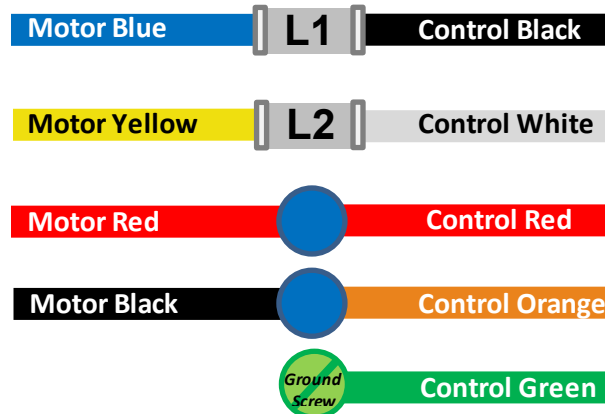

Special Note: GEM Remotes

If you are using a GEM remote control instead of a switch, and have wired the remote according to GEM's instructions, make the following change to the above diagrams:

Interchange the White and Orange control wires. This will now make Control Orange connected to L2 and Control White will be connected to Motor Black.